
1


# Prepare.

You need

-Access to the web interface or the app-Access to the Monta Charging Portal or the new Charging Hub (https://portal2.monta.app)

-The ChargePoint ID of your wallbox (e.g. NEXT-WS110607). This can be found on the housing, for example.

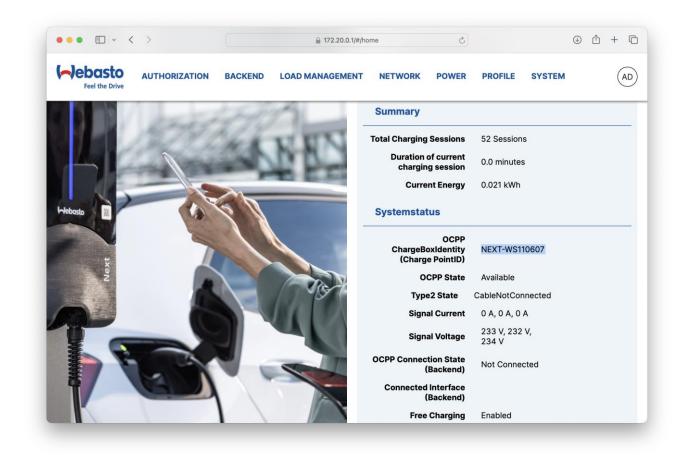

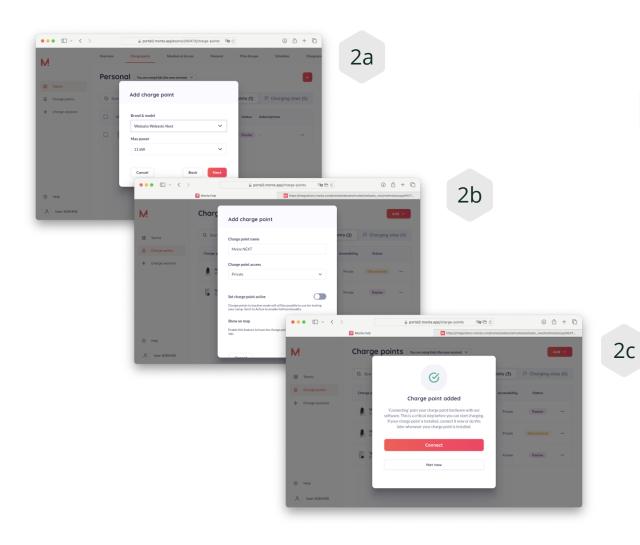

Set up in Monta


You need

- -Add a new ChargePoint and select "Webasto Next 11kW"
- -Select the location
- -Enter the details (Private or Public and a name of your choice)
- -Click on "CONNECT" to access the Integration Manager

3 Set up in Monta

- In the Integration Manager, select OCPP
- Then enter the ChargePoint ID, upper/lower case is important.
- Click on "Continue". You will receive the backend endpoint to be entered in the wallbox, at least:

wss://ocpp.monta.app

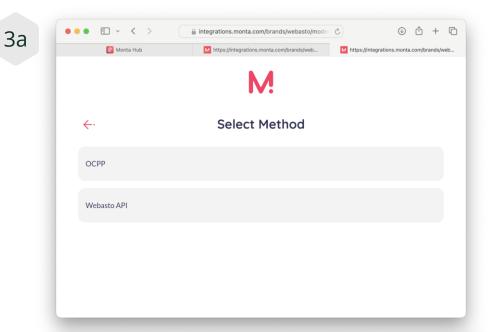

integrations.monta.com/brands/webasto/mode

Monta Hub

3b

4


# Configuration of NEXT


It is important that the Next is connected to the Internet either via WLAN or LAN.

There are two settings to make:

- -Under "Backend", enter the Monta backend endpoint: wss://ocpp.monta.app
- -Under System, the order "NTP, Heartbeat" must be set as the time source ("Time Source").

Then click on "Save".

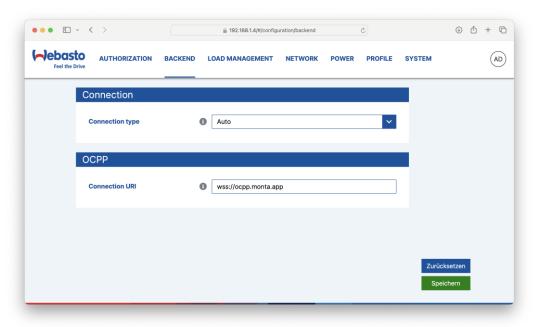

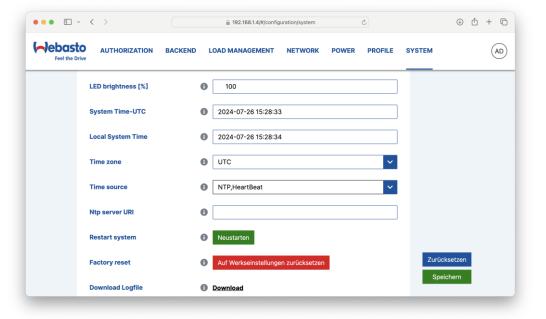



5

# Final step

Now click on "Yes, pair charge point" in the Monta Portal. The portal now accepts the connection and pairs with the box.

Yes, pair charge point

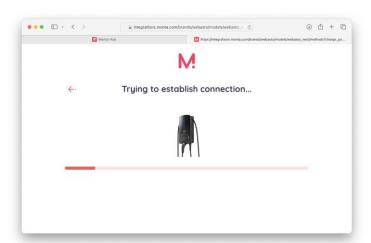

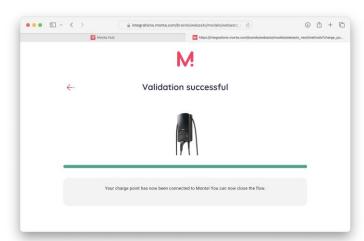

6 Check

A correct backend connection is displayed in both Monta and NEXT.

